



WWW.910BLUEBIRD.COM

## Diff Swaps

**T**  
**A**  
**B 165 to H190**

**L**  
**E** is one's simple. All you do is remove the diff using the workshop manual as a guide, and reverse the procedure with your new, larger diff.

**O**  
**F**

**C**  
**O**  
**N**  
**T**  
**E**  
**N**  
**T**  
**~**